

In case the knob becomes loose over time from use, follow the steps below to tighten it again:

1. Use a 2mm Allen hex key to completely unscrew the upper grub screw, as shown in the photo.




2. Rotate the knob until you can see the second grub screw through the hole. This screw holds the knob in place.



3. Use a 1.5mm Allen hex key and insert it into the hole to engage with the recessed part of the inner grub screw. Do not tighten it yet.



4. Gently pull the knob outward and hold it in that position so you can see the hex key forming an angle, as shown in the photo. Then, firmly tighten the inner grub screw and make sure the knob can be pressed inward and makes a clicking sound.

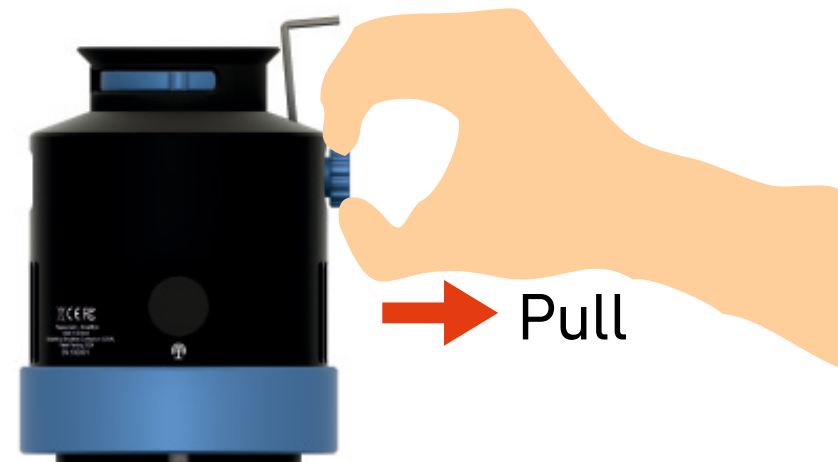

5. Finally, reinstall the top grub screw using the 2mm Allen hex key. Do not overtighten it—this screw mainly serves to cover the hole.

